




Hewlett Packard®

Color &
Photo
Cartridges

#51641 (#41), C1823 (#23), C3844A (#844),
C3845A (#845), C6578 (#78), C6625 (#17)

IMPORTANT: Prior to begin working on any cartridge, find a suitable area (i.e. a sink or over paper towels) where you can tolerate any ink spill.

Note: For best results and to avoid printing with out ink and damaging the **PRINT HEAD** (the metal plate where the ink comes out), immediately refill empty cartridges.

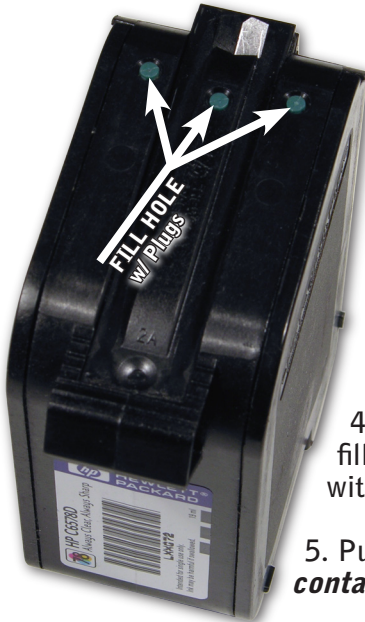

1. The three filling holes for these cartridges are located at the top (as shown on the image), and have small plastic plugs in them. Each plug will need to be pushed into the cartridge using the tip of the included drill tool, a ballpoint pen or other similar object.

2. Remove the plastic cover from the needle and connect the needle to the syringe.

3. Fill syringe with 10 ml of proper color to be refilled. (See images for proper color filling locations)

4. Place the cartridge on a horizontal position with the filling holes facing sideways towards you (as shown on images with color locations)

5. Push the needle all the way towards the center of the cartridge. **Note: These cartridges contain a sponge and resistance may be felt.**

6. Very S-L-O-W-L-Y inject approximately 10 ml of proper color ink, per chamber, or until ink just begins to rise at the top of the filling hole. If ink begins to rise at the filling hole stop and draw out 1 ml, as the chamber is full. Any unused ink can be returned to the bottle. **IMPORTANT: Make sure ink from one chamber does not run into the next color chamber, as you will get ink cross-contamination.**

Color Cartridge
#17, #23, #41
& #78

7. Rinse the syringe and needle with water and dry for next color refill.

8. Repeat steps 3 through 7 for each color to be refilled.

9. Once all colors have been refilled, cover the filling holes with either electrical tape or Green tape dots and place the cartridge again in the same horizontal position as step 4, for about 30 minutes. This will allow the sponge inside the cartridge to absorb and stabilize the ink.

10. If a large drop of ink is forming at the print head, immediately wipe it off and place the cartridge again in the same position as step 4, for an additional 15 minutes.



11. Before placing the cartridge back into the printer, verify that all three colors are coming out. Fold a paper towel in four parts and applying some pressure, place the print head against the paper towel for about 5 seconds. Remove the cartridge from the paper towel and verify that all three colors are marked on it. Repeat this step as necessary until all colors

are marked on the paper towel.

12. Re-install the cartridge in the printer and run 1-3 cleaning cycles as per your printer instructions.

13. Rinse the syringe and needle with water and store for future use.

#C3844A
Color Cartridge
(#844)

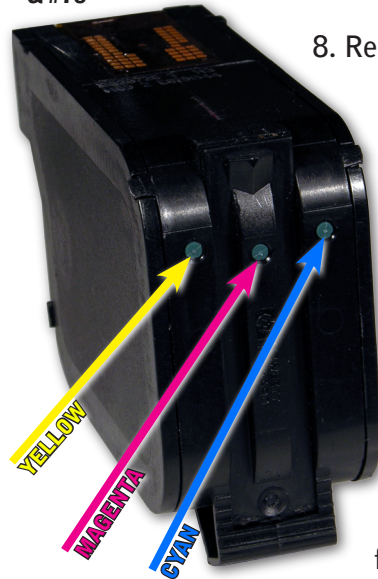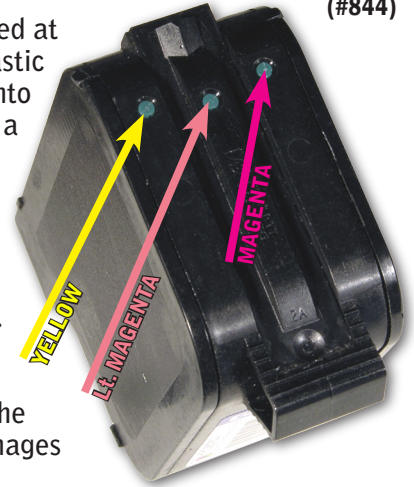

#C3845A
Color Cartridge
(#845)

